

YOUR ROOM SAFE INSTRUCTIONS

To Lock the Safe

With the door open and unlocked

1. Input any 3 or 4 digit code of your choice using the keypad
2. Press the # key to confirm and store the code
3. Close the door, turning the handle anti-clockwise to lock the safe

To Open the Safe

1. Key in your 3 or 4 digit code
2. Press the # key - a beep noise will sound and the green light will come on. If the amber light is lit, you have entered the wrong code
3. Turn the handle clockwise within 5 seconds, to open the safe

If you have any problems with the safe, please let Jimmy or Fiona know between the hours of 7am and 9pm unless it is an emergency.